



SHEFFIELD

living well, everyday



PORTABLE MINI FRIDGE

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY
AND KEEP FOR FUTURE REFERENCE

PACKAGE CONTENTS

- 1 x Sheffield Portable Mini Fridge and Warmer
- 1 x Instruction Manual

Confirm all parts before disposing of the carton. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

TECHNICAL SPECIFICATION

Model:	PLA1901
Rated Voltage:	220-240V~, 50/60Hz
Power Consumption:	Warming: 33W Cooling: 38W
Rated Voltage:	12VDC
Power Consumption:	Warming: 25W Cooling: 29W
Element:	Thermo-electric Peltier module
Volume:	4L
Climate Class:	N / SN / T
Min/Max Temperature:	Determined by environmental temp.
Working Environment:	10°C - 25°C
Max Temp Difference:	16-20°C
Size (W x H x D):	190x275x250mm
Net Weight:	1.8kg

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm



IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Carefully read this manual before using this appliance.

- Ensure that you know how the appliance functions and how to operate it.
- Maintain the appliance in accordance with the instructions to ensure that it functions properly.
- Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it.
- The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling, including excess voltage.

Do not use this appliance if it has been dropped or damaged in any way, or if the supply cord is damaged.

Intended Use

- **Intended Purpose:** Do not use the appliance for anything other than its intended purpose, and only use it as described in this manual
- **Accessories:** Do not use any accessories with the appliance that are not supplied or specifically recommended.
- This appliance is intended to be used for cooling and keeping warm food and for storing skincare.
- The appliance is designed to be operated from a DC power supply socket of a vehicle or an AC power supply.
- The appliance is suitable for camping use, students' dormitory or dining hall, travelling or in the office.

The cooling box is not suitable for:

- storage of corrosive, caustic or solvent-containing substances
- freezing of food
- This cooling box is not intended to be used as a built-in appliance.

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

WARNING: Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Page 2

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer.

Supply Cord and Plug

Check that the voltage specification on the type plate corresponds to that of the energy supply.

Only connect the appliance as follows:

- With the DC connection cable to a DC power supply in the vehicle
- Or with the AC connection cable to an AC power supply

Always unplug from the mains supply when not in use. Do not abuse or damage the power cord. If the supply cord is damaged, it must be replaced by the manufacturer its service agent or a similarly qualified person in order to avoid a hazard. Ensure that the socket is located near the appliance and easily accessible to quickly unplug the appliance from the mains in the event of an operating problem. Always pull out the plug from the socket (pull on the plug, not the cable)

If the appliance is connected to a DC outlet: Disconnect the appliance and other power-consuming devices from the battery before connecting a quick charging device.

If the appliance is connected to a DC outlet: Disconnect the appliance or switch it off when you turn off the engine. Otherwise, you may discharge the battery.

Never bend the mains lead and never wind it around the appliance as this may lead to cable breakages. Risk of electrocution!

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance.

WARNING: The appliance is not suitable for transporting caustic materials or materials containing solvents.

Double Insulation Safety



This appliance is double insulated for your protection. Do not attempt to repair a double-insulated appliance. Return to the supplier or qualified technician for repair.

Use and Environment

Ensure that the device is placed on a flat, stable, slip-free and dry surface. Do not cover the appliance while it is operating. Ensure that there is sufficient clearance and that a safe distance to walls, ceilings and other objects are kept.

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

The air intake and outlet openings must never be covered or blocked. Clean the ventilation slots regularly to keep them free of dirt and prevent the openings from clogging.

- Do not place any objects on the device.
- Do not fill the inner container with ice or fluids.

Ensure at all times that there is a minimum of 50 mm ventilation on all four sides of the appliance. Keep the ventilation area free of any objects that could restrict the airflow to the cooling components. Do not place the appliance in closed compartments or areas with no or minimal airflow.

Health Hazard

Please check if the cooling capacity of the device is suitable for storing the food or medicine you wish to cool.

Food may only be stored in its original packaging or suitable containers.

Opening the door for long periods can cause a significant increase in the temperature in the compartments of the device.

If the device is left empty for long periods:

- Switch off the device.
- Defrost the device.
- Clean and dry the device.
- Leave the lid open to prevent mould from developing within the device.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Supervision

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Damaged or Dropped

Always inspect your appliance before use. Check parts are correctly attached. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water. Return it to an authorised service dealer for examination and repair.

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Water

The device shall not be exposed to rain.

Do not immerse the appliance or its supply cord in water. Do not use it with wet hands or use in damp situations. Do not use it near a laundry, bath, shower or swimming pool.

If the appliance does fall into water, first remove the plug from the mains socket before lifting the appliance out of the water! Do not turn the appliance on again until it has been checked at an approved service point. The same applies if the mains lead or appliance is damaged, or if the appliance has fallen on the floor. Risk of electrocution!

Cleaning

Do not try to clean the inner part of the air inlet or outlet with a sharp object.

Do not operate near flammable gas or fumes.


Do not use in any other orientation other than upright as shown in this manual.

Environment-Friendly Disposal

Place the packaging material in the appropriate recycling waste bins wherever possible.

If you wish to finally dispose of the product, ask your local recycling centre or specialist dealer for details about how to do this in accordance with the applicable disposal regulations.

ASSEMBLY AND OPERATION

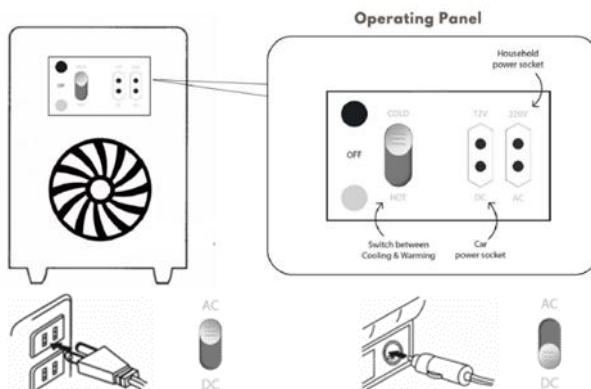

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm

Before First Use

1. Remove all packaging materials and safely dispose of them.
2. Remove any stickers or labels from the appliance. (Except for the rating label!).
3. Wipe the inside and outside of the appliance with a moist cloth and dry with a towel.

Household Power

1. Place the cooling box on a firm base.
2. Push the "HOT" / "COLD" switch to "OFF"
3. Connect the AC cable to the socket of the appliance.
4. Plug the other end of the AC cable into the main power supply.
5. Push the switch on the operating panel into the "HOT" position or the "COLD" position to switch the appliance on. When in cooling mode the LED will be GREEN, when in warming mode the LED will be RED
6. The unit starts cooling/heating the interior
7. Push the switch on the operating panel to "OFF" to power off the unit.

DC 12V

NOTE: If you connect the appliance to the vehicle's power, remember that you may have to turn on the ignition to supply it with power.

1. Place the cooling box on a firm base.
2. Push the "HOT" / "COLD" switch to "OFF"
3. Plug one end of the 12V connection cable into the socket of the appliance.
4. Connect the other end of the 12V connection cable to the 12V DC socket in your vehicle.
5. Push the switch on the operating panel into the "HOT" position or the "COLD" position to switch the appliance on. When in cooling mode the LED will be GREEN, when in warming mode the LED will be RED
6. The unit starts cooling/heating the interior
7. Push the switch on the operating panel to "OFF" to power off the unit.

CLEANING and MAINTENANCE

This appliance requires little maintenance. It contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

Before Cleaning

- When not in use or before cleaning, always disconnect the appliance from the mains supply.

Care and Cleaning

- Occasionally clean the device's interior and exterior with a damp cloth.
- Make sure that the air inlet and outlet vents on the device are free of any dust and dirt so that heat can be released and the device is not damaged.
- Wipe the main outer body with a hot damp cloth and mild cleaning agent only, dry with a dry towel, and do not immerse this appliance in any liquid. Do not put water into the appliance.
- Wipe the inside of the appliance with a hot damp cloth.
- We also recommend periodic cleaning of these vents by lightly running a vacuum cleaner nozzle over the guards to remove any dust or dirt that may have accumulated inside or on the unit.

NOTE: Never use rough scouring pads or abrasive cleansers on any plastic or metal parts as the surface may be damaged.

Store in a Safe Place

When not in use store your appliance and all its accessories and instruction manual in a safe and dry place

Frequently Asked Questions

Why are there water droplets inside my fridge?

A small amount of water accumulation is completely normal in thermoelectric appliances and can occur due to condensation dripping from stored products. To remove excess moisture, dry the inside with a soft cloth twice a week or place a desiccant pack inside the unit.

Why is my fridge not cold enough?

The temperature of the fridge is determined by the environmental temperature outside the fridge. (It cools approx.. 16-20oC lower than environmental temperature)

AFTER SALES SUPPORT

Email: service@prolinkbrands.co.nz

Phone: 0508 776 546 - Mon-Fri 8:30am – 4.30pm